

Important Information!



The image on the box containing your new sight has incorrect information on it. Please see the photographs below to find windage/elevation and locking screw placement on your new sight.

When mounting, make certain that the sight is sitting flat against your scope mount rail to ensure proper alignment with your gun. Also, be careful never to over-tighten the mounting bolts or they may break.

ultradot



Make certain that you loosen your wind/elev locking screw before making adjustments to your sight. After sighting in has been completed, re-tighten the locking screw to prevent your sight from moving. Be careful not to over-tighten the locking screw.

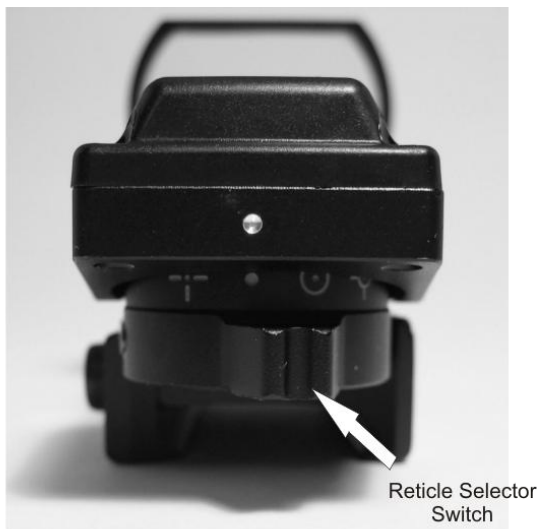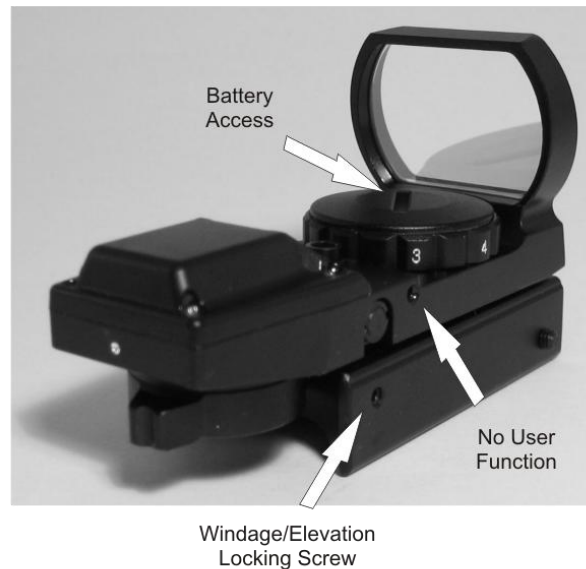

**For more questions call:
866-473-3368**

w w w . u l t r a d o t w e s t . c o m